


Quickstart Guide: SuperTalker™ progressive communicator

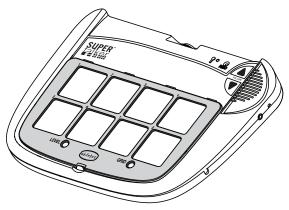



Press and Hold the RECORD button until the RECORD


Light activates, then Release.

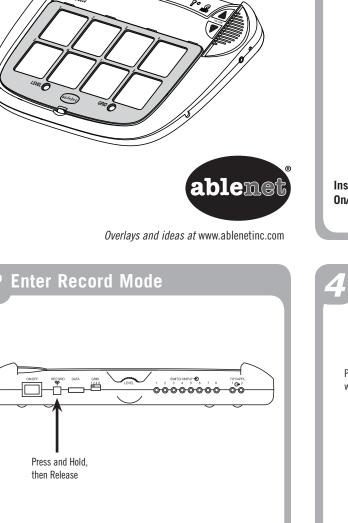

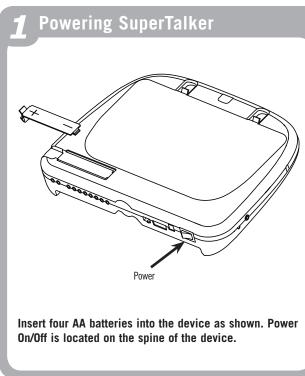


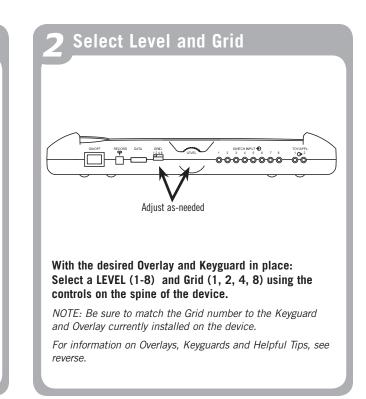


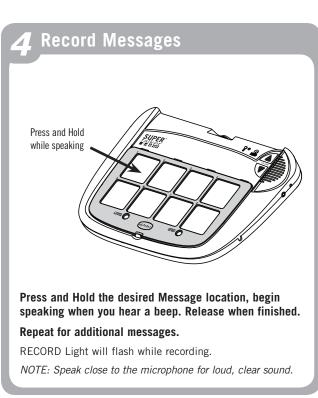

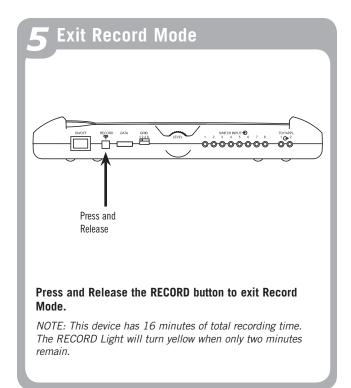

Advanced Features

 

 

Playing a message with an External Switch

Attach the switch of your choice with a 1/8-inch (3.5mm) to the Switch Input jacks and continue to use the device as before. (Jacks indicated with •••••••)

NOTE: Switch Input jacks are mapped to message locations 1 - 8 from left to right, depending on the grid used.

Controlling Toys or Appliances

Plug any switch-adapted toy or appliance into the TOY/APPL jack. When the SuperTalker is activated, the attached toy or appliance will activate for the length of the recorded message.

 
(Jacks indicated with _______)

NOTE: TOY/APPL jacks are mapped to the first two message locations on the SuperTalker. To control an electrical appliance, a PowerLink® 3 is required. For information about adapting toys and appliances, visit www.ablenetinc.com

Using the Step Ahead jack

NOTE: Step Ahead jack will move through the message locations based on the Grid selected.

Keyguards and Overlays



About Keyguards

SuperTalker includes keyguards in 1, 2, 4, and 8-grid formats. Release the installed keyguard by pressing on the tab holding the bottom center of the keyguard. Small numbers at the top of each message location correspond to the External Switch jacks (see above).

Keyguard Storage

The keyguard storage area on the back of SuperTalker can hold up to three keyguards at once. Plain paper overlays may be stored here as well.

Blank Overlays

Blank overlays for SuperTalker are available on-line at www.ablenetinc.com

Helpful Hints

Recording Tips

While in Record Mode, if the SuperTalker is not activated after 20 seconds, the device will exit Record Mode.

Master Clear - Press and hold the RECORD button for 10 seconds to delete all messages from SuperTalker.

Playback Tips

If the Keyguard in-use does not match the Grid selected, SuperTalker will not play the correct message.

If you press a message location where no message has been recorded, the RECORD Light will flash yellow.

Volume Controls


Lock or Unlock SuperTalker's Volume controls by pressing the bottom left and right message locations simultaneously. When adjusting volume,


RECORD Light Yellow – Volume unlocked RECORD Light Red – Volume locked or max/min

 
Mounting Options

A range of mounting options are available for SuperTalker at www.ablenetinc.com.

Product Map and Warranty

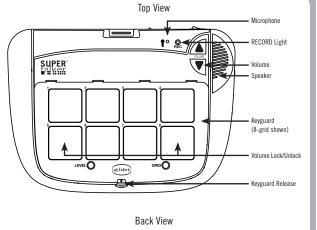

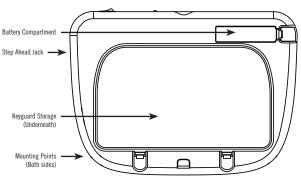



Warranty/Repair/Return Information

AbleNet offers a limited one-year warranty on the SuperTalker progressive communicator product. For full warranty details, visit www.ablenetinc.com

For more information on AbleNet products and services, contact:

AbleNet, Inc.,

Minneapolis/St. Paul, MN 800-322-0956 (US & Canada) Internet: www.ablenetinc.com

900-80159-01 Rev. A (03/08)