

Table Of Contents

Safety Instructions	3
Function Identification	5
Setting up your Wake Assure Alarm Clock	6
How to set the time	7
How to set the alarm	7
How to set the ALARM mode	7
How to set the SECURITY TIMER	8
Battery Backup	9
Warranty and Service	10

Important Safety Instructions

CAUTION:

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY SAME TYPE 3A, 125V FUSE

When using your alarm clock, always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons, including the following:


1. Read and understand all Instructions. Observe all warnings and other markings on the product.
2. There may be a slight chance of electric shock from lightning.
3. Do not use this product near water, or when you are wet. For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquids, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
4. If this product does not operate normally, you cannot resolve the problem, or if the product is damaged, refer to the Ameriphone Warranty. Do not open this product except as may

be directed in this owner's manual. Opening this product or reassembling it incorrectly may expose you to hazardous voltages or other risks. Opening this product automatically voids the warranty.

5. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled on the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in further damage.
 - E. If the product has been dropped or appears damaged.
 - F. If the product exhibits a distinct change in performance.

SAVE THESE INSTRUCTIONS

Function Identification

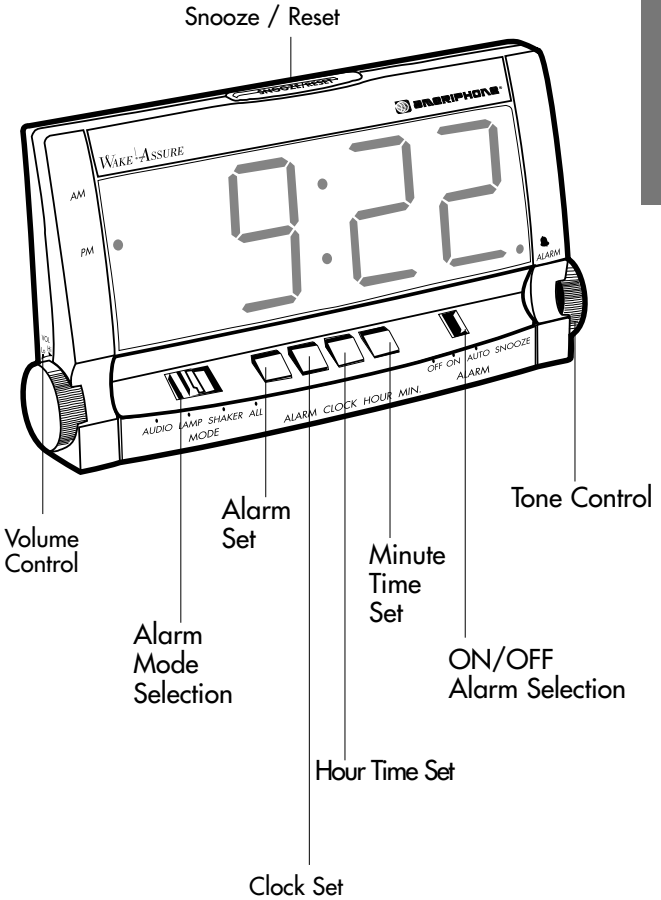


Setting up your Wake Assure Alarm Clock

Optional 9V battery
(To retain time and program setting only)

Security Timer

Bedshaker

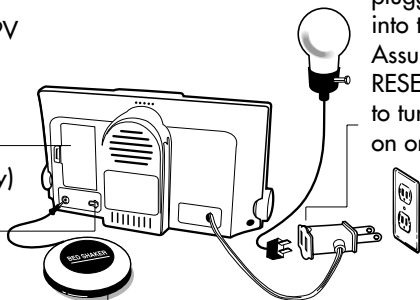

Turn lamp on first before plugging it into the Wake Assure. Use RESET button to turn lamp on or off.

How to set the time

1. Press and hold the **CLOCK** button down.
2. Push the **HOUR** button until the desired hour [AM or PM] appears on the display panel.
3. Repeat Step 2 using the **MINUTE** button to set desired minute.

How to set the alarm

1. Press and hold the **ALARM** button down.
2. Push the **HOUR** and then the **MINUTE** button until the desired wake up time appears on the display panel.

How to set the ALARM mode

1. Slide the **MODE** switch to the Audio or Lamp or Bedshaker or ALL position.
2. Slide the **ALARM** switch to the **ON** or the **AUTO SNOOZE** position. If auto snooze is selected, the alarm will go off every 5 minutes for the next 60 minutes. To interrupt the alarm

momentarily, press the **SNOOZE/ RESET** button. To shut off the alarm and stop auto snooze completely, slide **AUTO SNOOZE** to the OFF position.

How to set the **SECURITY TIMER**

1. Slide the switch to the **ON** position. The connected lamp will come on and off for a few seconds at a time at random times between 6PM and 11PM to simulate as if someone is in the house.
2. To cancel the **TIMER** after it has come on, press the **SNOOZE/ RESET** button once. Press the button again to operate the lamp. The **TIMER** will come on again the next day.
3. To turn the timer **OFF** permanently, slide the switch to the **OFF** position.

Battery Backup

A 9-volt battery can be installed to retain time and the programming of the alarm settings in case of a power outage. When the power comes back on, the clock's previous time and alarm settings will be still be operational. During a power outage, the clock will not display the current time and all its alarm functions will not be operational. Be sure to plug the unit in before installing batteries. Failure to do this could cause the time to be slow by four hours per day outside the United States and Canada. If this problem occurs, unplug the unit and remove the batteries. Then plug the unit in before installing batteries. Please observe caution when handling electrical appliances.