



Function Identification

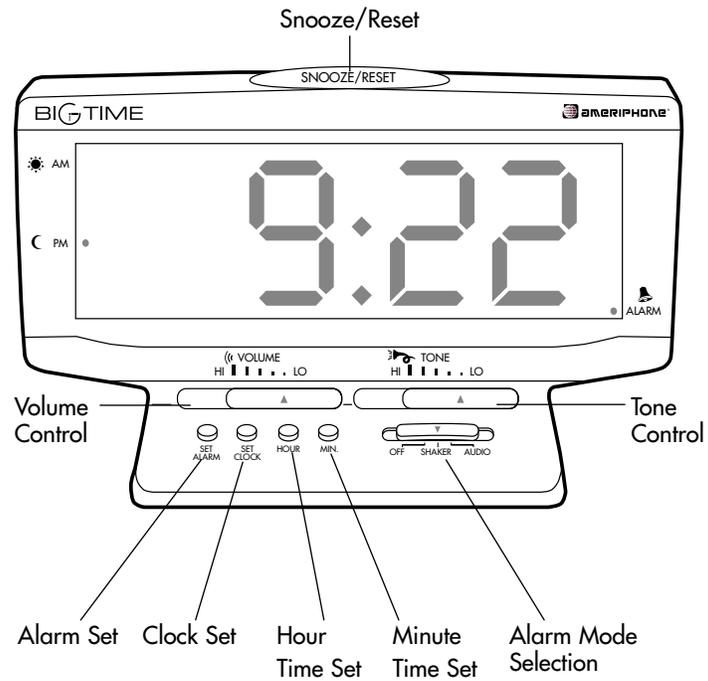

Setting Up Your Big Time Alarm Clock

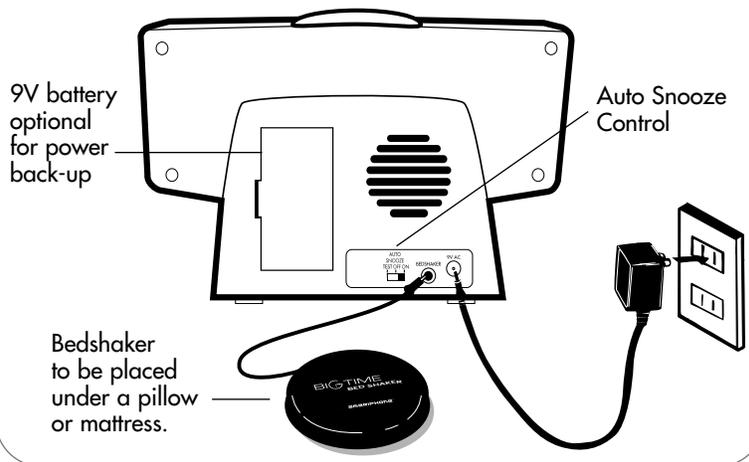

How to set the time:

- 1 Press and hold the **SET CLOCK** button down.
- 2 Push the **HOUR** button until the desired hour [AM or PM] appears on the display panel.
- 3 Repeat Step 2 using the **MINUTE** button to set desired minute.

How to set the alarm:

- 1 Press and hold the **SET ALARM** button down.
- 2 Push the **HOUR** button until the desired hour [AM or PM] appears on the display panel.
- 3 Repeat Step 2 using the **MINUTE** button to set desired minute.

How to use the Bedshaker:

- 1 Plug the Bedshaker into the "Bedshaker" port on the back of the Big Time.
- 2 Place the Bedshaker under a pillow or mattress.
- 3 Select **SHAKER** when choosing the ALARM mode.

How to select the ALARM mode:

- 1 Slide the **ALARM** switch to the Audio or Bedshaker position.
- 2 To interrupt the alarm momentarily, press the **SNOOZE** button. In order for this feature to work, the Auto Snooze must be **ON** (See the next section for instruction on adjusting the Auto Snooze). The alarm will go off again in nine minutes and stay on, unless the **SNOOZE** is pressed again or the alarm is turned off.
- 3 To shut off the alarm and stop completely, slide the **ALARM** switch to the **OFF** position.

How to adjust the Auto Snooze:

- 1 Turn the unit around and locate the **AUTO SNOOZE** switch.
- 2 Set the switch to **ON** to activate the Auto Snooze feature.

How to adjust the Audio tone and volume:

- 1 Slide the **ALARM** switch to the Audio position.
- 2 Adjust the volume by sliding the **VOLUME** control bar to the desired level.
- 3 Adjust the tone by sliding the **TONE CONTROL** bar to suit your hearing.

Battery Backup

A 9-volt battery can be installed to retain time and the programming of the alarm settings in case of a power outage. When the power comes back on, the clock's previous time and alarm settings will still be operational. During a power outage, the clock will not display the current time and all its alarm functions will not be operational.

Limited Warranty

Ameriphone warrants the Big Time Alarm Clock against any defect in materials or workmanship for the period of one year from the date of purchase.

If your Ameriphone product is defective and returned within 30 days of the date of purchase, your Big Time Alarm Clock dealer will replace it at no charge.

If returned after 30 days but within one year, we will repair or replace it at no charge. In the repair of your Big Time Alarm Clock, we may use new or reconditioned replacement parts. If we elect to replace your Big Time Alarm Clock, we may replace it with a new or reconditioned product of the same or similar design. Repair or replacement will be warranted for either 90 days or the remaining time on the original warranty period, whichever is longer. When in need of warranty repair, please call our customer service department at (800) 874-3005 (voice), (800) 772-2889 TTY. They will help you process your return shipment. You must prepay all shipping costs.

Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the product is fit for ordinary use), are limited to one year from date of purchase. We will not pay for loss of time, inconvenience, loss of use of your Big Time Alarm Clock, or property damage caused by your Big Time Alarm Clock or its failure to work, or any other incidental or consequential damages. Some states do not allow limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

We suggest you save the original package materials in the event you need to ship the Big Time Alarm Clock. When shipping for warranty repair, include your name, address, phone number, proof of date of purchase and a description of the problem. After repairing the product, we will ship it back to you at no cost within the United States.

This limited warranty does not cover defects resulting from accidents, damage while in transit to our service location, alterations, unauthorized repair, failure to follow instructions, misuse, use outside the United States or Canada, fire, flood and acts of God.

Important Safety Instructions

When using your alarm clock, always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons, or property, including the following:

1. Read and understand all Instructions. Observe all warnings and other markings on the product.
2. There may be a slight chance of electric shock from lightning.
3. Do not use this product near water, or when you are wet. For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquids, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
4. If this product does not operate normally, you cannot resolve the problem, or if the product is damaged, refer to the Ameriphone Warranty. Do not open this product except as may be directed in this owner's manual. Opening this product or reassembling it incorrectly may expose you to hazardous voltages or other risks. Opening this product automatically voids the warranty.
5. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled on the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in further damage.
 - E. If the product has been dropped or appears damaged.
 - F. If the product exhibits a distinct change in performance.

SAVE THESE INSTRUCTIONS